FOCALPOINT HPMBS PERFORMANCE SPECIFICATION:

HIGH PERFORMANCE MEDIA

HIGH PERFORMANCE MEDIA MUST MEET A MINIMUM OF 100" PER HOUR INFILTRATION RATE.


HIGH PERFORMANCE STRUCTURAL UNDERDRAIN


- MUST HAVE A MINIMUM OF 19 SQUARE INCHES OF ORIFICE OPENING PER SQUARE FOOT.
- MUST MEET HS-20 LOADING REQUIREMENTS.
- MUST BE MODULAR IN NATURE AND ASSEMBLED ON SITE.
- MUST HAVE MINIMUM 90% INTERIOR VOID SPACE.

PLANT COMPONENT

- SUPPLIER SHALL PROVIDE LIST OF ACCEPTABLE PLANTS
- IF PLANTS ARE NOT INCLUDED IN THE LANDSCAPE CONTRACT/PLANS, SITE CONTRACTOR SHALL PROVIDE PLANTS.
- PLANTS SHALL BE INSTALLED AT THE TIME THE SYSTEM IS COMMISSIONED FOR USE.
 PLANTING OUTSIDE THIS TIME REQUIRES APPROVAL BY THE ENGINEER/LANDSCAPE ARCHITECT OF RECORD.
- SEE FOCALPOINT INSTALLATION GUIDE FOR PLANT SPACING, PLANTING PROCEDURES ETC.

FOCALPOINT HPMBS CONSTRUCTION GUIDE					
Α	FOCALPOINT LENGTH				
В	# UNDERDRAIN LONG				
С	FOCALPOINT WIDTH				
D	# UNDERDRAIN WIDE				
Е	WATER QUALITY VOLUME				
F	OVERFLOW ELEVATION				
G	OVERFLOW FLOWLINE				
Н	TOP OF MULCH				
I	TOP OF GABION (OPTIONAL)				
J	UNDERDRAIN HEIGHT				

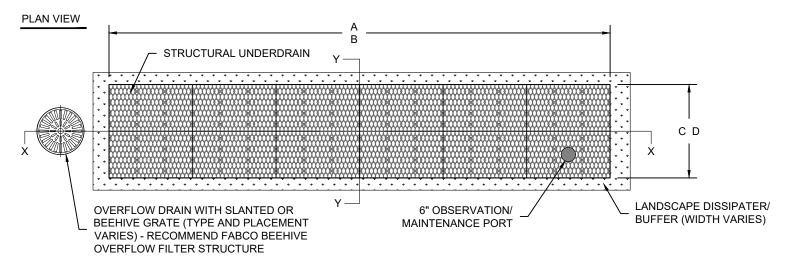

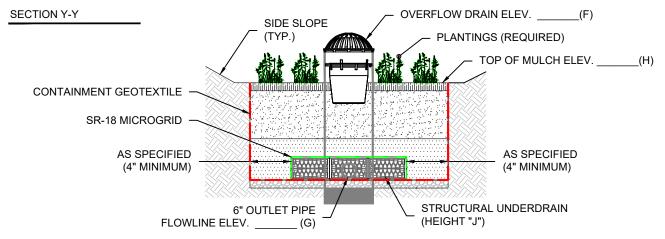




CONFER TECHNOLOGIE
TO FIND AVALLE ADED
RESELLER IN YOUR REEVOM
OR CONTACT CONVERGENT
WATER TECHNOLOGIES AT

FOCALPOINT HPMBS CONSTRUCTION GUIDE


DETAILED CROSS SECTION

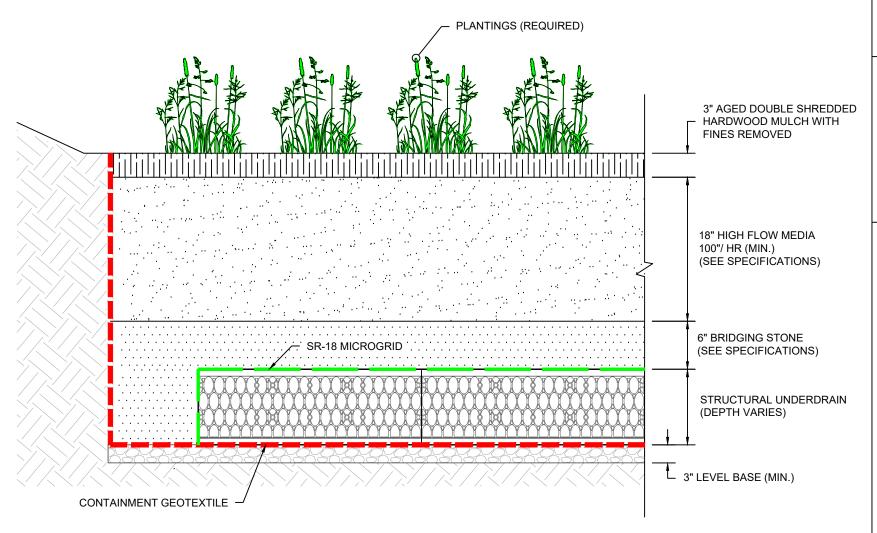




ERGENT

DETAILED CROSS SECTION FOCALPOINT HPMBS

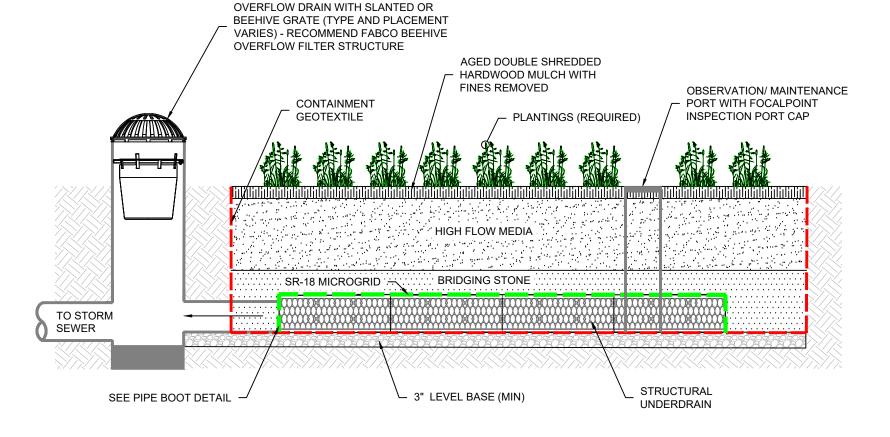

OBSERVATION/ MAINTENANCE PORT CONNECTION

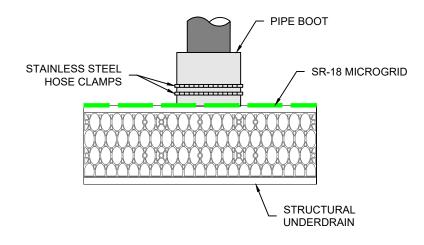

OUTLET/ INLET PIPE CONNECTION


3' **OUTLET PIPE**

PIPE BOOT

FRONT VIEW

PIPE BOOT DETAIL


STAINLESS STEEL **HOSE CLAMPS SR-18 MICROGRID** PIPE BOOT STRUCTURAL UNDERDRAIN

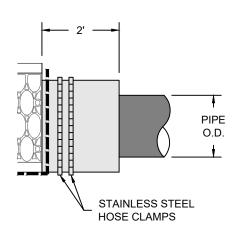

SIDE VIEW

OBSERVATION/ MAINTENANCE PORT

PORT USED FOR INSPECTION PURPOSES AND FOR SYSTEM MAINTENANCE AS REQUIRED. WATER SHALL BE PUMPED INTO THE SYSTEM AND RESUSPEND ACCUMULATED SEDIMENT. MINIMUM REQUIRED MAINTENANCE INCLUDES A QUARTERLY INSPECTION FOR THE FIRST YEAR OF OPERATION AND A YEARLY INSPECTION THEREAFTER FLUSH AS NEEDED.

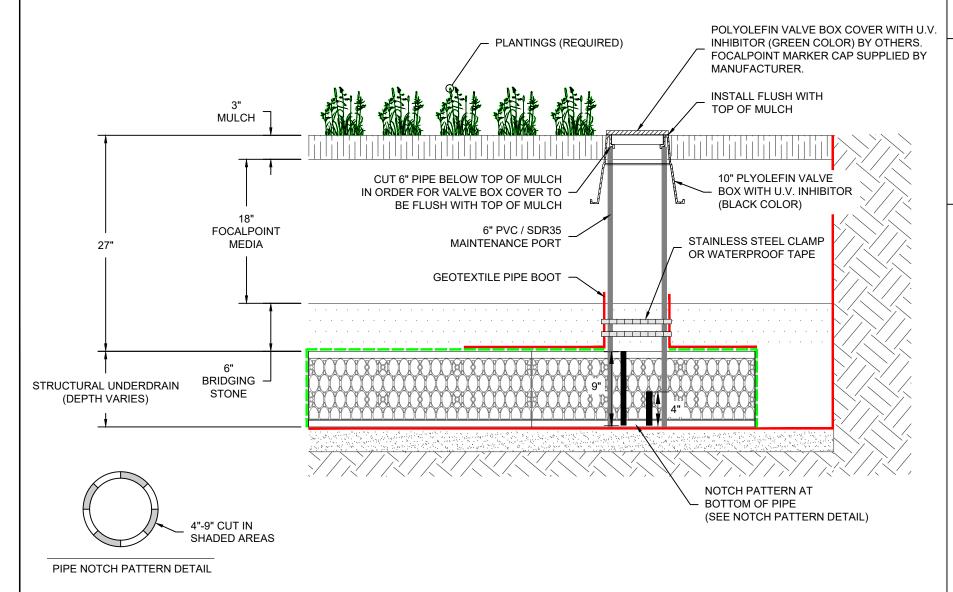



TO FIND A VALUE ADDED
TO FIND A VALUE ADDED
RESELLER IN YOUR AREA WIST
WWW CONVERGENTWATER COM
OR CONVERGENT WATER THE PLANT OGRES AT
WATER THE PLANT OGRES AT

FOCALPOINT HPMBS

DBSERVATION/MAINTENANCE PORT

DATE

NOTES:

- 1. MATERIAL:
 - A) SUPPORT FLANGE: ALUMINUM ALLOY PLATE, 5000 SERIES
 - B) STORMSOK: WOVEN POLYPROPYLENE GEOTEXTILE
 - C) EXPANSION RING: ALUMINUM ALLOY CHANNEL, 6000 SERIES
 - D) HARDWARE: STAINLESS STEEL

GENERAL INSTALLATION:

REFERENCE VIEW

- RECOMMENDED MINIMUM VAULT DEPTH: 2-IN BELOW STORMSOK
- USE ONLY WITH FABCO REPLACEABLE STORMSOK

STRUCTURE DIAMETER (IN.)	DEBRIS CAPACITY (CU.FT)	FILTERED FLOWRATE (CFS)	BYPASS FLOWRATE (CFS)
12.0	0.66	1.7	1.0
15.0	1.0	2.1	1.3
18.0	1.2	2.3	1.4
24.0	2.8	3.9	2.2
30.0	2.8	3.9	2.2

DETAIL 2

GEN

STRUCI FOCALPOINT HPMBS **OVERFLOW FILTER**

EHIVE

Ш

面

01/28/2022

DETAIL 1

(HARCO STRUCTURE HIDDEN)

DOME GRATE (REF) SUPPORT RING **FABCO BEEHIVE STANDARD** HARCO DRAIN INLET **EXPANDABLE SUPPORT RING ADJUSTABLE** STRUCTURE (REF) **TURNBUCKLE** HARCO DRAIN INLET STRUCTURE (REF) SEE DETAIL 2 \bigcirc SUPPORT RING ADJUSTABLE SECTION B-B **TURNBUCKLE** (VIEW ROTATED 90 DEG.) **CUTAWAY 1** (BEEHIVE STANDARD HIDDEN FOR CLARITY) (BEEHIVE STANDARD HIDDEN FOR CLARITY) SEE DETAIL 1 SUPPORT RING **ADJUSTABLE TURNBUCKLE BYPASS** REPLACEABLE STORMSOK

SECTION A-A

ADJUST THE TURNBUCKLE DOWN TO GIVE THE SMALLEST RING DIAMETER AND LOCATE THE EXPANSION RING INTO THE HARCO STRUCTURE MINIMUM OF 6-IN DOWN FROM THE TOP OPENING AS SHOWN. BEGIN OPENING THE TURNBUCKLE UNTIL THE EXPANSION RING IS SELF SUPPORTING, THEN VERIFY THE RING IS LEVEL AND PLUMB TO THE HARCO STRUCTURE. USING A CALIBRATED TORQUE WRENCH, CONTINUE TO OPEN THE TURNBUCKLE

TO GIVEN TORQUE (MODEL-SPECIFIC). DO NOT OVER TIGHTEN. INSTALL THE STORMSACK ASSEMBLY DIRECTLY ON THE SUPPORT RING.

FABRIC LOCATION AND SPECIFICATION